


Configurar comando estore elétrico

Configure electric blind remote

Configurar mando de persiana eléctrica

Configurer la télécommande du store électrique

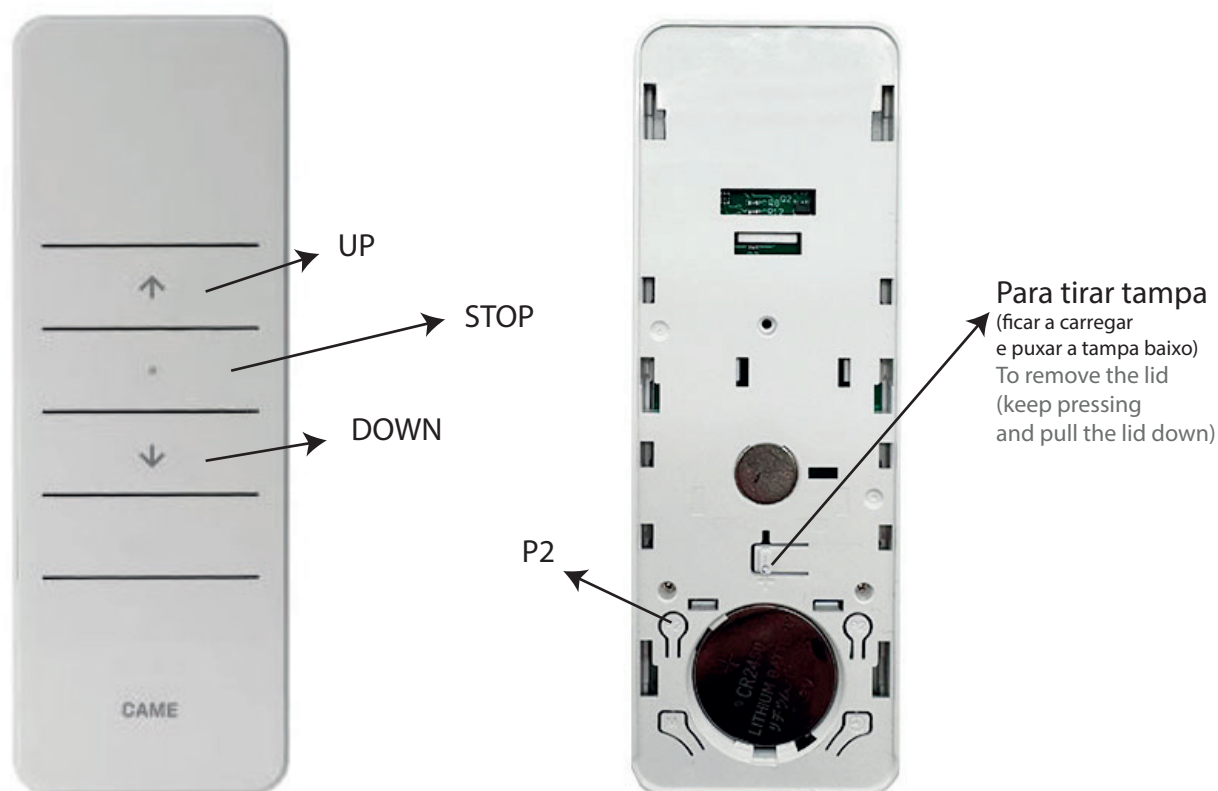



1 Carregar em P2 2x e na tecla de subida (o motor faz click clack)

Press P2 twice and the up button (the motor makes a click-clack sound)

Pulsar P2 dos veces y la tecla de subida (el motor hace click clack)

Appuyer deux fois sur P2 et sur la touche de montée (le moteur fait clic clac)



2 No motor, regular com calma ciclo limite para cima e para baixo com o afinador

On the motor, carefully adjust the upper and lower limit cycle with the tuner
En el motor, regular con calma el ciclo límite hacia arriba y hacia abajo con el regulador

Sur le moteur, régler calmement la course limite vers le haut et vers le bas avec le régulateur



INVERTER OS SENTIDOS DO COMANDO

Reverse the remote directions

Invertir los sentidos del mando

Inverser les sens de la commande



2x p2 + tecla de descida

2x P2 + down button

2x P2 + tecla de bajada

2x P2 + touche de descente



cs@storesrapid.com

tlf: +351 910 495 472

(Chamada para rede móvel nacional)

Horário 10h às 12h / 14h às 17h

Segunda a Sexta-Feira